

GASTEC Instructions for No.131La Vinyl Chloride Detector Tube

FOR SAFE OPERATION :

Read this manual and the instruction manual of your Gastec Gas Sampling Pump carefully.

⚠ WARNING:

1. Use only Gastec detector tubes in a Gastec Pump.
2. Do not interchange or use non-Gastec parts or components in Gastec's detector tube and pump system.
3. The use of non-Gastec parts or components in Gastec's detector tube and pump system or use of a non-Gastec detector tube with a Gastec pump or use of a Gastec detector tube with a non-Gastec pump may result in property damage, serious bodily injury, and death; voids all warranties; and voids all performance and data accuracy guaranties.

⚠ CAUTION : If not observed, injuries to the operator or damage to the product may result.


1. When breaking the tube ends, keep away from eyes.
2. Do not touch the broken glass tubes, pieces and reagent with bare hand(s).
3. The sampling time represents the time necessary to draw the air sample through the tube. The tube must be positioned in the desired sampling area for the entire sampling time or until the flow finish indicator indicates the end of the sample.

△ NOTES : maintaining performance and reliability of the test results.

1. Use Gastec Gas Sampling Pump together with Gastec Detector Tubes only for the purposes specified in the instruction manual of the detector tube.
2. Use this tube within the temperature range of 0 - 40°C (32 - 104°F).
2. Use this tube within the relative humidity range of 0 - 90%.
4. This tube may be interfered with by the coexisting gases. Please refer to the "INTERFERENCES".
5. Shelf life and storage conditions of the tube are marked on the label of the box of tube.

APPLICATION OF THE TUBE : Use of this tube for the detection of Vinyl chloride in air or the industrial areas and environmental atmospheric condition.

SPECIFICATION : (As a result of Gastec's commitment to continued improvement, specifications are subject to change without notice.)

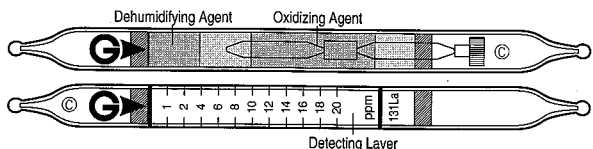

Measuring Range	0.25 - 0.5 ppm	0.5 - 1 ppm	1 - 20 ppm	20 - 54 ppm
Number of Pump Strokes	4	2	1	1/2
Correction Factor	1/4	1/2	1	2.7
Sampling Time	1 minute per pump stroke			45 seconds
Detecting Limit	0.05 ppm (n = 4)			
Color Change	Yellow → Reddish brown			
Reaction Principle	Vinyl chloride is oxidized to form hydrogen chloride to produce red stain.			

Coefficient of Variation : 10% (for 1 to 6 ppm), 5% (for 6 to 20 ppm)

**** Shelf Life : Please refer to the Validity Date printed on the box of tube.**

**** Store the tubes in the refrigerator to keep at 10°C (50°F) or below.**

CORRECTION FOR TEMPERATURE, HUMIDITY AND PRESSURE :

Calibration of the Gastec detector Tube No.131La is based on a tube temperature of 20°C (68°F) and not the temperature of the gas being sampled, approximately 50% relative humidity and normal atmospheric pressure.

Temperature : No correction is required.

Humidity : No correction is required.

Pressure : To correct for pressure, multiply the tube reading by

$$\frac{\text{Tube Reading (ppm)} \times 1013 \text{ (hPa)}}{\text{Atmospheric Pressure (hPa)}}$$

MEASUREMENT PROCEDURE :

1. For leak checking of the pump insert a fresh sealed detector tube into pump. Follow instructions provided with the pump operating manual.
2. Break tips off a fresh detector tube in the tube tip breaker of the pump.
3. Connect (C) marked ends with rubber tubing after breaking each end.
4. Insert the tube into the pump inlet with arrow (G) on the tube pointing toward pump.
5. Make certain pump handle is all the way in. Align guide marks on pump body and handle.
6. Pull the handle all the way out until it locks on 1 pump stroke (100ml). Wait 1 minute and confirm the completion of the pump stroke.
7. For lower than 1 ppm measurement, repeat the above sampling procedure 1 or 3 more times. For higher than 20 ppm measurement, prepare fresh tube and take 1/2 pump stroke.
8. Read concentration at the interface of the stained-to-unstained reagent.
9. If correction is needed, multiply the correction factors of pump strokes and pressure.

INTERFERENCES :

Substance	Concentration	Interference	Changes color by itself to
Ethylene	≥ 0.1%	Minus error	No discoloration
Tetrachloroethylene	≥ 3 times	Plus error	Reddish brown
Trichloroethylene	≥ 1/2	Plus error	Reddish brown
Toluene, Xylene	≥ 500 ppm	Minus error	No discoloration
Benzene	≥ 400 ppm	Minus error	No discoloration

Dehumidifying agent removes water vapor.

The table of this interference gases primarily expresses the interference of each coexisting gas in the gas concentration range, equivalent to the gas concentration. Therefore, the test result may be given positive result by the other substances not listed in the table. For more information is needed, please contact us or our distributors in your territory.

APPLICATION FOR OTHER SUBSTANCES :

Substance	Correction Factor	No. of Pump Strokes	Measuring Range
1,3-Dichloropropane	0.5	2	0.5 - 10 ppm
p-Ethyl benzylchloride	2.5	2	2.5 - 50 ppm
Ethyl chloroformate	7	2	7 - 140 ppm
2-Methyl allyl chloride	2.75	1	2.8 - 55 ppm
Methyl Chloroformate	58	5	58 - 1160 ppm
Propylene dichloride	40	2	40 - 800 ppm
1,2,4-Trichlorobenzene	0.65	4	0.65 - 13 ppm

CORRECTION FACTOR : Detector tubes are primarily designed to measure specific gases. But it is also possible to measure other substances of similar chemical properties with the aid of a correction factor or chart. Therefore, please make use of the correction factor/chart measuring ranges as a reference. For more precise factor please contact your Gastec distributor.

DANGEROUS AND HAZARDOUS PROPERTIES :

Threshold Limit Value-Time Weighted Average by ACGIH (2004) : 1 ppm
Explosive Range : 3.6 - 23%

DISPOSAL INSTRUCTION : Reagent of the tube uses toxic chromic acid. When disposing the tube regardless of whether used or unused, follow the rules and regulations of the local government.

WARRANTY : If you have any questions regarding gas detection and quality of the tubes, please feel free to contact your Gastec representatives.

Manufacturer : Gastec Corporation
6431 Fukaya, Ayase-City, 252-1103, Japan

IM00131LaE1
Printed in Japan
0411Z